

Replacing the cartridge

Once the indicator has faded (completely lost its blue colour) the ion exchange resin is depleted. At this point the cartridge must be replaced. To do this, follow these simple steps:

1. Turn off the water mains before opening the filter housing.
2. Release the pressure from the product by unscrewing the vent valve of the head.
3. Then screw and tighten the vent valve.
4. Open the housing unscrewing the housing using the supplied spanner or suitable tool.
5. Remove the used cartridge.
6. Clean the filter housing with cold water and a soft sponge.
7. Put a new cartridge in the container.
8. Tighten the housing to housing's head using the supplied spanner or suitable tool.
Do not over tighten.
9. Turn on the water mains.
10. Slowly turn on a water supply (tap) downstream of the filter.
11. Wait for air purge from the vent valve, then screw and tighten the vent valve.

Note: Let the water flow for at least 1-2 litres

